

PRODUCT & GENERAL

CONSULT | DESIGN | SUPPLY

Assembly Instructions

Cut Bench Overhead Shelves

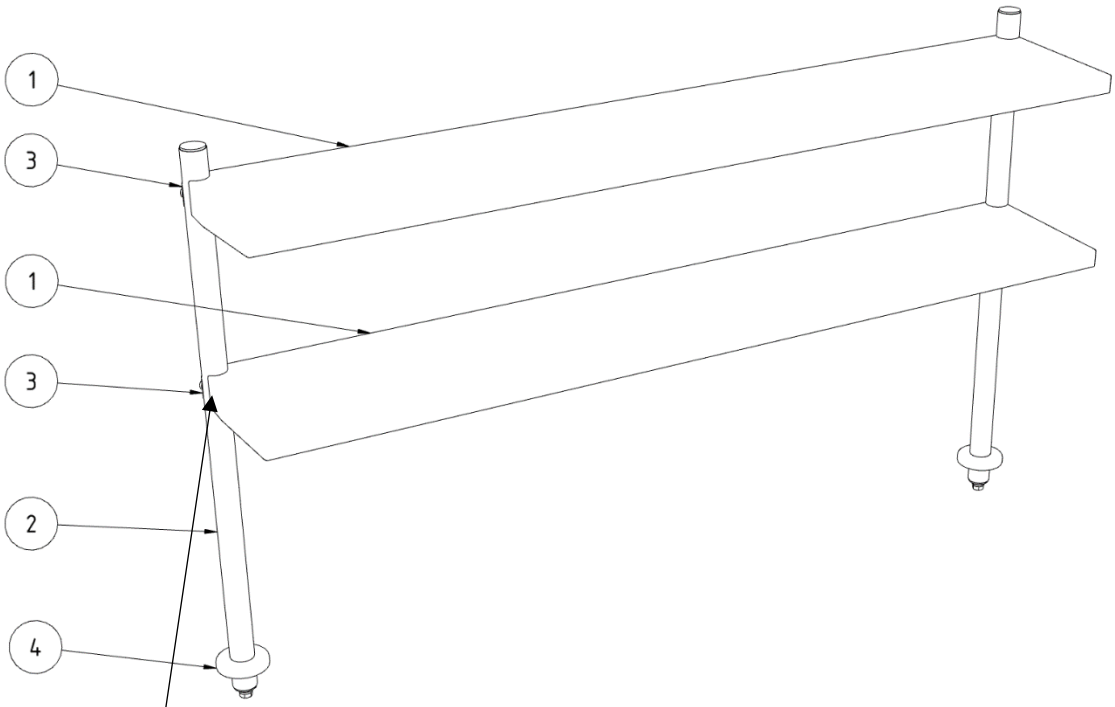

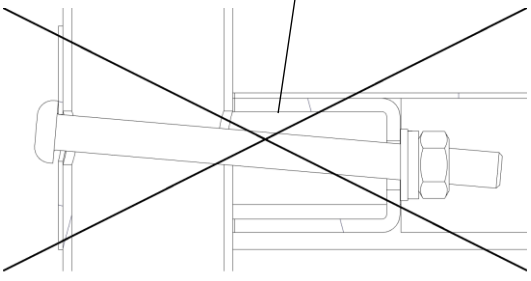


Make sure bolt is straight before tightening to prevent seizing

ITEM #	DESCRIPTION	QUANTITY
1	SHELF	2
2	LEG	2
3	LEG CLAMP	4
4	CAP	2
5	M8 x 90 BHCS	4
6	M8 PLAIN WASHER	4
7	M8 SPRING WASHER	4
8	M8 HEX NUT	4
9	M12 x 35 HEX BOLT	2
10	M12 SPRING WASHER	2
11	M12 PLAIN WASHER	2
12	SHIM PACKERS	

Step 1

Pre-Assemble prior to installation to Cut Bench

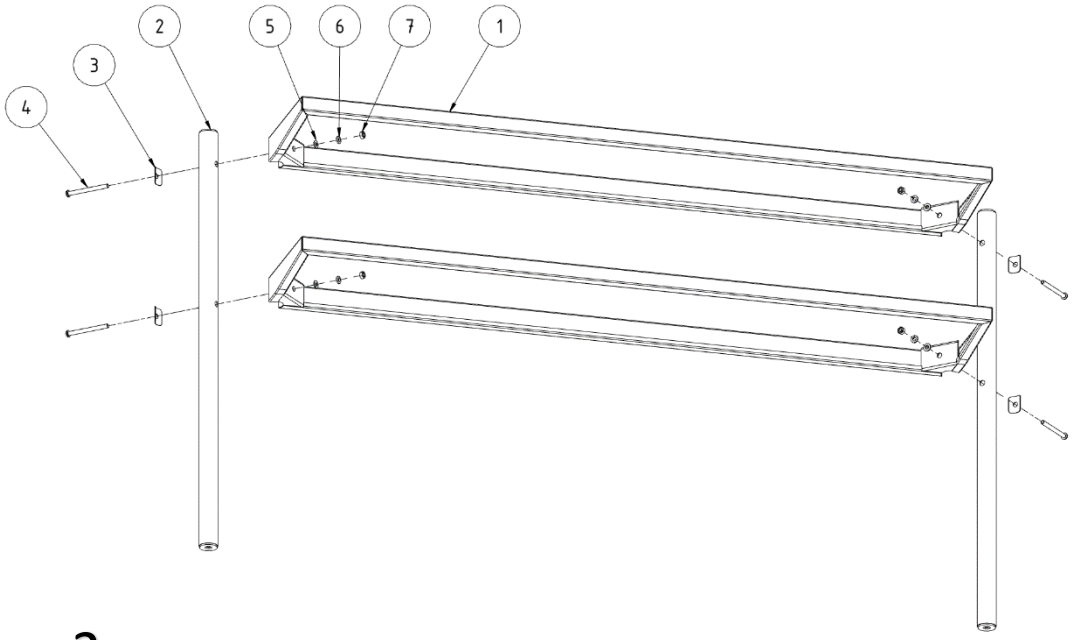

Step 2

Assemble to Cut Bench. Use Shim Packers between Legs and bore in Cut Bench (Refer to Cut Bench instructions for assembly)

